

# BD214/BD214T: Bidirectional Detector for WR975 Waveguide

## Contents

General Description .....	1
Specifications .....	2
Pin Assignment .....	2
Detector Correction Curve .....	3
Typical Directivity .....	4
Dimensional Drawing .....	4
Waveguide Machining Template .....	5
Wiring Examples .....	6

## General Description

BD214 and BD214T are bidirectional detectors intended for simultaneous sampling of the incident and reflected waves in high-power 900 MHz industrial applications using the WR975 (R9) rectangular waveguide. BD214T includes a temperature sensor. These detectors combine the following components:

- Four-port directional coupler
- Attenuators
- Zero-bias Schottky diode detectors
- Temperature sensor with analog output (BD214T only)

The detectors deliver well-scaled DC voltages approximately proportional to the power of the waves propagating in the forward and reverse directions in the main waveguide.

The detector transfer curves are generally nonlinear and vary with temperature. A transfer curve of an “average detector” is presented in this datasheet.


Users can apply the output from the temperature sensor to their own software correction of the temperature dependence of the detector outputs.

The detector module is fastened to a parent waveguide by means of six M3 or similar-diameter screws after machining of appropriate holes in the waveguide wall. As an option, an assembly consisting of the module affixed to a precisely machined parent waveguide with the standard length of 300 mm can be provided.

The calibrated assembly is shown in [Fig. 2](#) above.



**Fig. 1.** Bidirectional detector BD214.

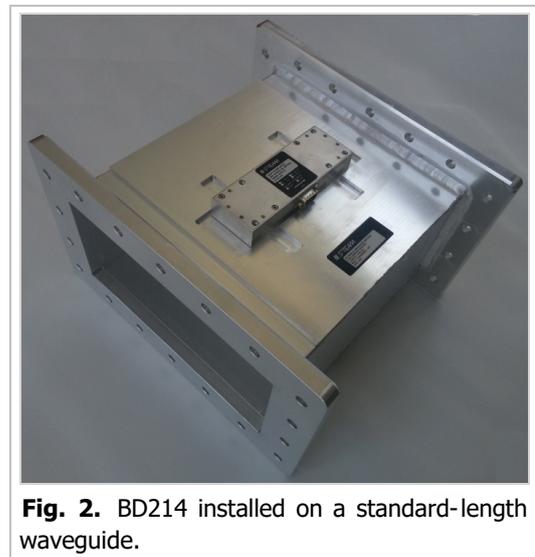


**Fig. 2.** BD214 installed on a standard-length waveguide.

## Specifications

Waveguide of destination	WR975 (R9)
Waveguide wall thickness	4 mm, optionally 0.125 inch
Waveguide surface flatness required at BD interface	0.04 mm
Frequency range	895 – 925 MHz
Maximum working power	10 kW, 100 kW
Directivity	25 dB min
Output voltage polarity	Positive
Video resistance (typical)	10.2 k $\Omega$
Internal output capacitance	2000 pF
Statistical spread of output voltage	$\pm 1$ dB (3- $\sigma$ deviation)
Output voltage temperature variation (+5 °C to +65 °C)	< 3 dB
Connector	D-sub 9-pin male (D9m)
Dimensions (L x W x H)	143.5 x 57.5 x 32 mm
Mass	300 g
Operating temperature range	-10 °C to +65 °C
Storage temperature range	-20 °C to +80 °C

## Pin Assignment

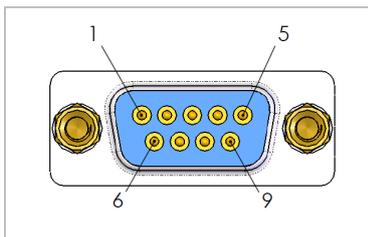

**Fig. 3.** D9m connector pin numbering.


Pin	Signal	Description
1	RFL	Reverse (reflected) signal: detector output
2		
3		
4	TSENS	Temperature sensor output
5		
6	FWD	Forward (incident) signal: detector output
7		
8	GND	Signal ground. Negative DC power supply input (0 V)
9	VPOS	Positive DC power supply input (+5 to +24 V)

### Notes:

- RFL, FWD and TSENS outputs are referred to GND.
- The forward wave should propagate in the direction of the arrow on the nameplate.
- Unassigned pins are not connected.
- TSENS and VPOS are available only in BD214T.

## Detector Correction Curve

A detector correction curve is the inverse of the transfer curve  $V = f(P)$ , where  $P$  is the power of a wave propagating in the waveguide in a given direction and  $V$  is the output voltage of the corresponding channel. The correction curve can serve, in particular in its mathematical form, for determining the input power from the output voltage. A typical *normalized* correction curve for ambient temperature 25 °C, frequency 915 MHz, and load resistance  $R_L = 33 \text{ k}\Omega$ , where  $P_{\text{max}}$  is the specified maximum working power, is shown in [Fig. 4](#) below.

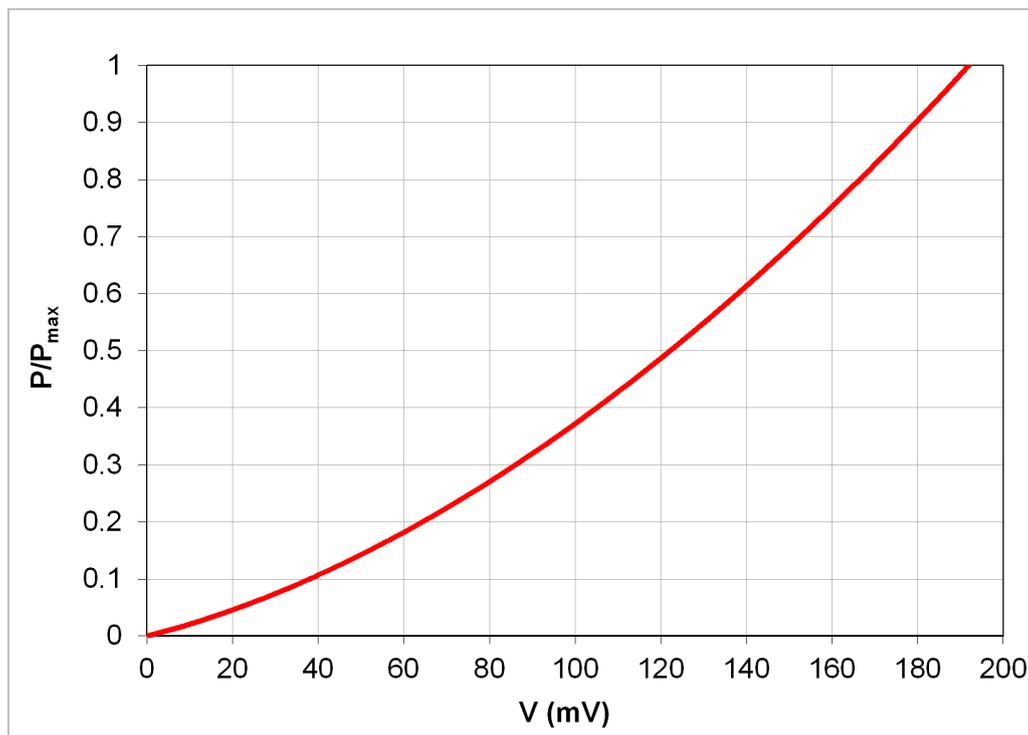

**Fig. 4.** Typical BD214 correction curve for both directions.  $P_{\text{max}}$  is the specified maximum working power.

The curve can be approximated by the polynomial

$$P/P_{\text{max}} = d_1V + d_2V^2 + d_3V^3 + \dots + d_nV^n$$

where  $P$  is the input microwave power,  $P_{\text{max}}$  is the specified maximum working power (both  $P$  and  $P_{\text{max}}$  in the same units),  $V$  is the output voltage in millivolts, and  $d_i$  are the polynomial coefficients listed below.

**Tab. 1.** Polynomial coefficients for BD214 correction curves.

Coefficient	Value
$d_1$	1.9290335E-03
$d_2$	1.9369431E-05
$d_3$	-1.6244479E-08
$d_4$	2.3241656E-11

Please be aware that the function is a statistical average based on evaluation of a number of detectors, and generally depends on temperature. The behavior of individual detectors may vary. For more critical applications that require accurate and temperature-independent power measurement, we recommend the use of the bidirectional power meter BPM214 instead.

### Typical Directivity

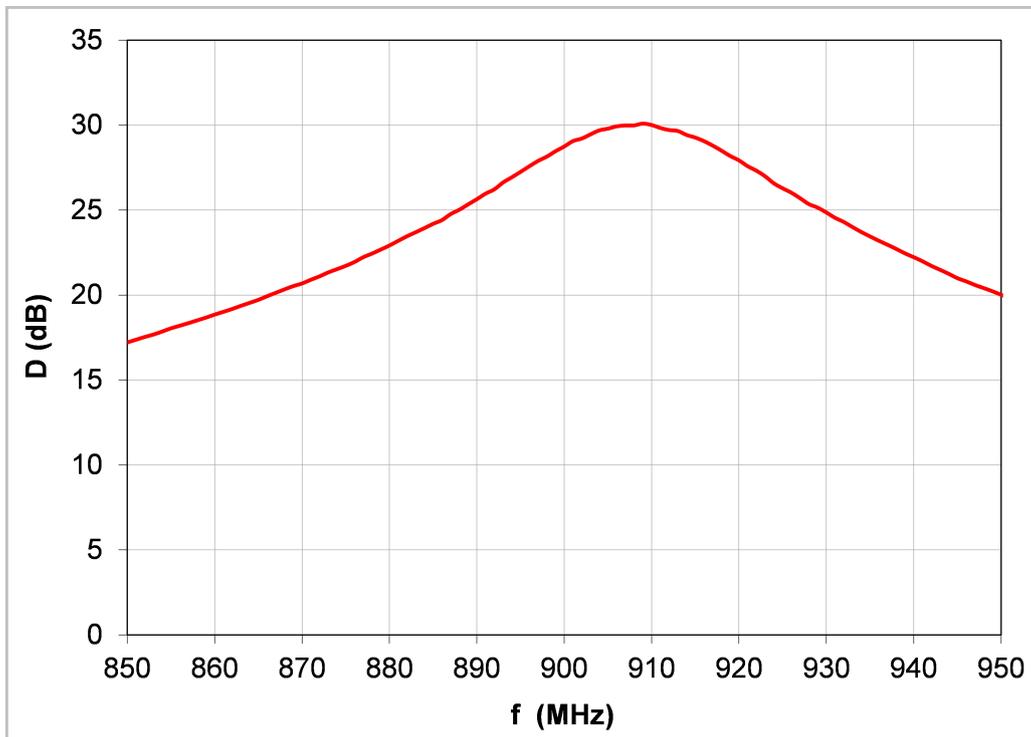


Fig. 5. Typical BD214 directivity (both directions).

### Dimensional Drawing


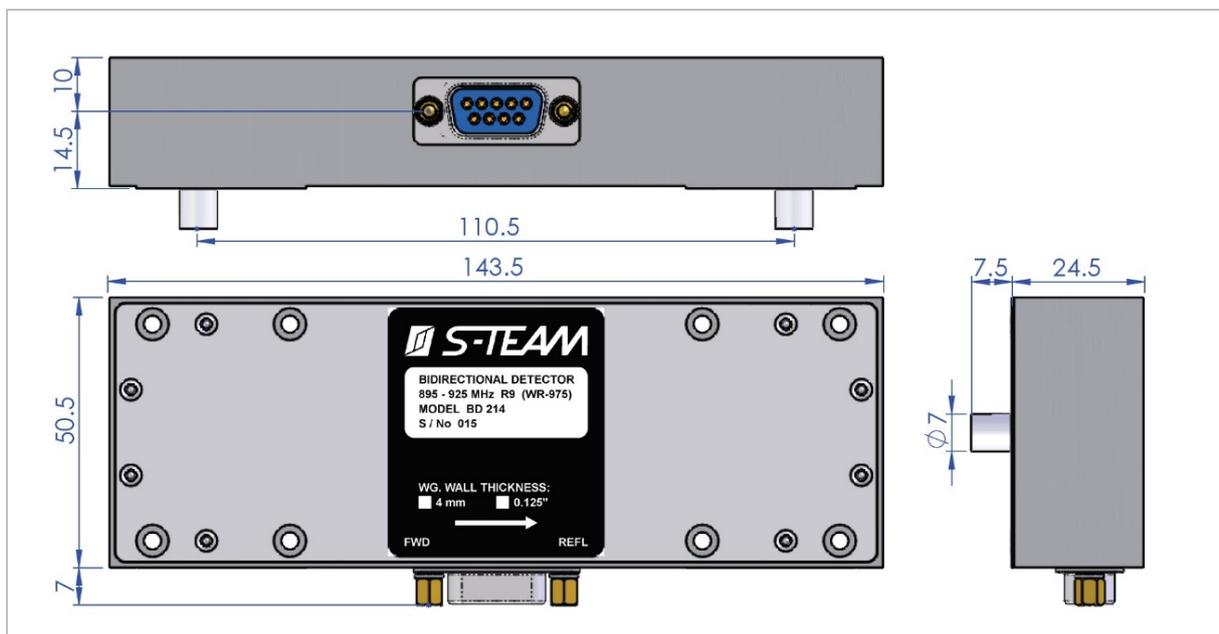


Fig. 6. Basic BD214 dimensions. All dimensions are in millimeters.

## Waveguide Machining Template

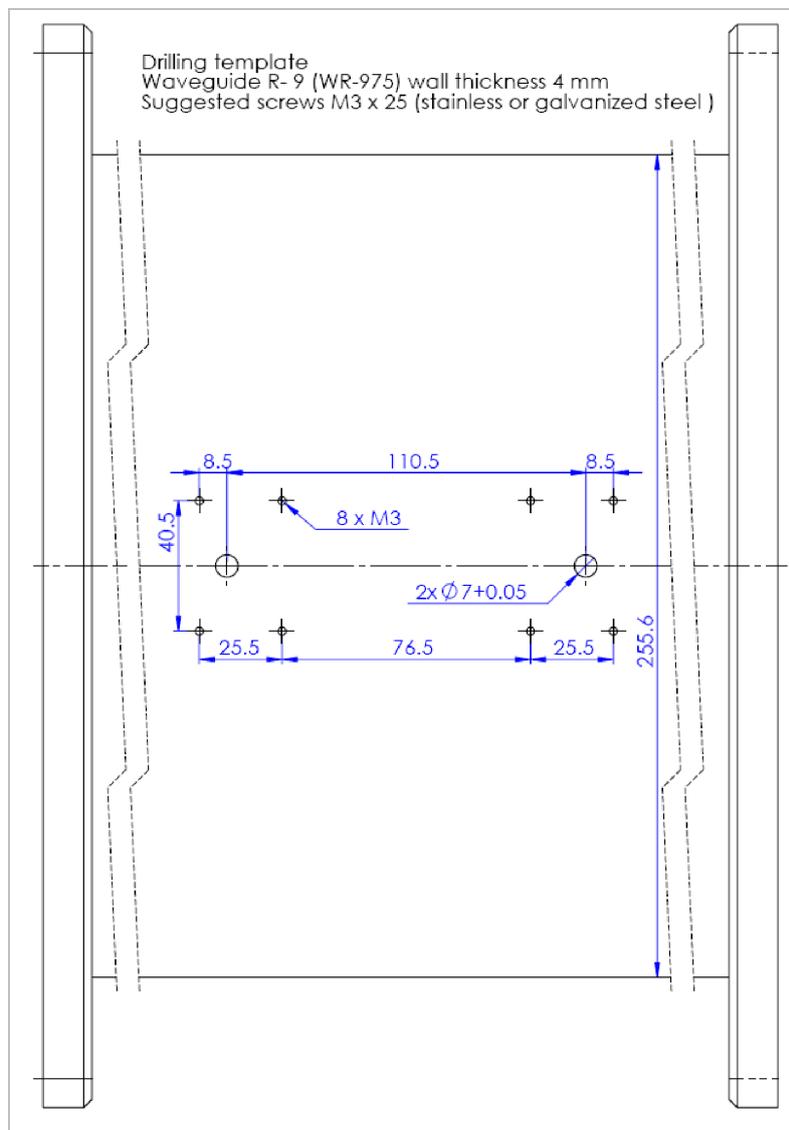

**Fig. 7.** Waveguide machining template. All dimensions are in millimeters. The pattern is centered about the waveguide axis. Unless the option 0.125" is requested, the waveguide wall thickness must be 4 mm.


### Important Note

Complying with the specified waveguide wall thickness and flatness of its surface interfacing with the detector is essential in order to achieve the specified measurement accuracy. The slope of the coupling factor as a function of the wall thickness is about -6 dB/mm (i.e., increasing the wall thickness decreases the output power readings).

If the wall thickness differs from the specified figure but is known, one can apply a user-defined correction based on the above slope. Nevertheless, the wall thickness should not deviate from the specification by more than  $\pm 0.3$  mm, as otherwise BD directivity will deteriorate.

To avoid problems with manufacturing precision waveguide components, one can order a calibrated assembly consisting of a BD module fixed to a parent waveguide. The standard waveguide length is 300 mm.

## Wiring Examples

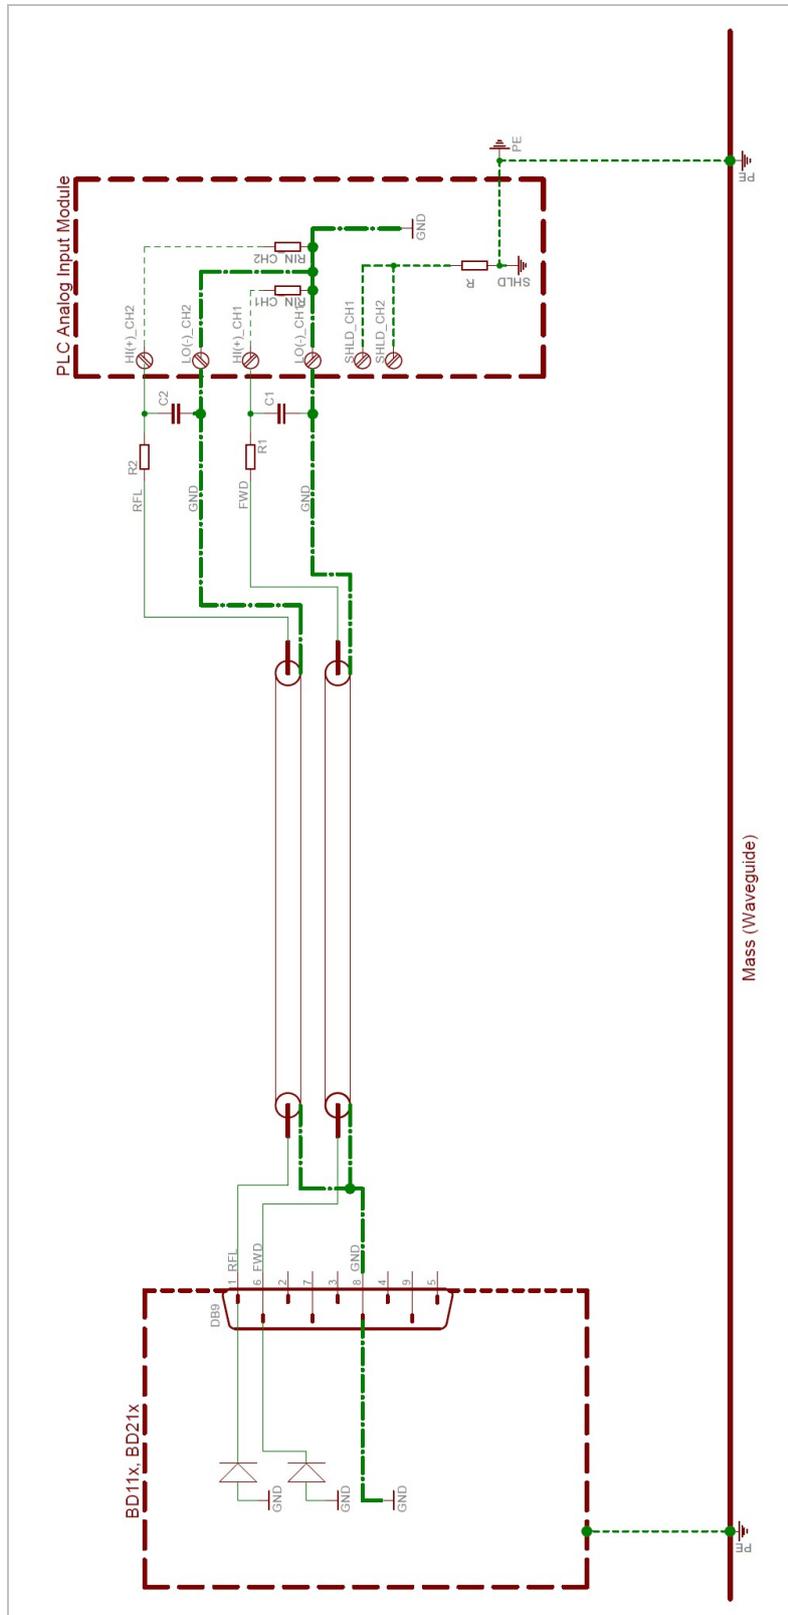

**Fig. 8.** Example of BD214 – PLC connection.

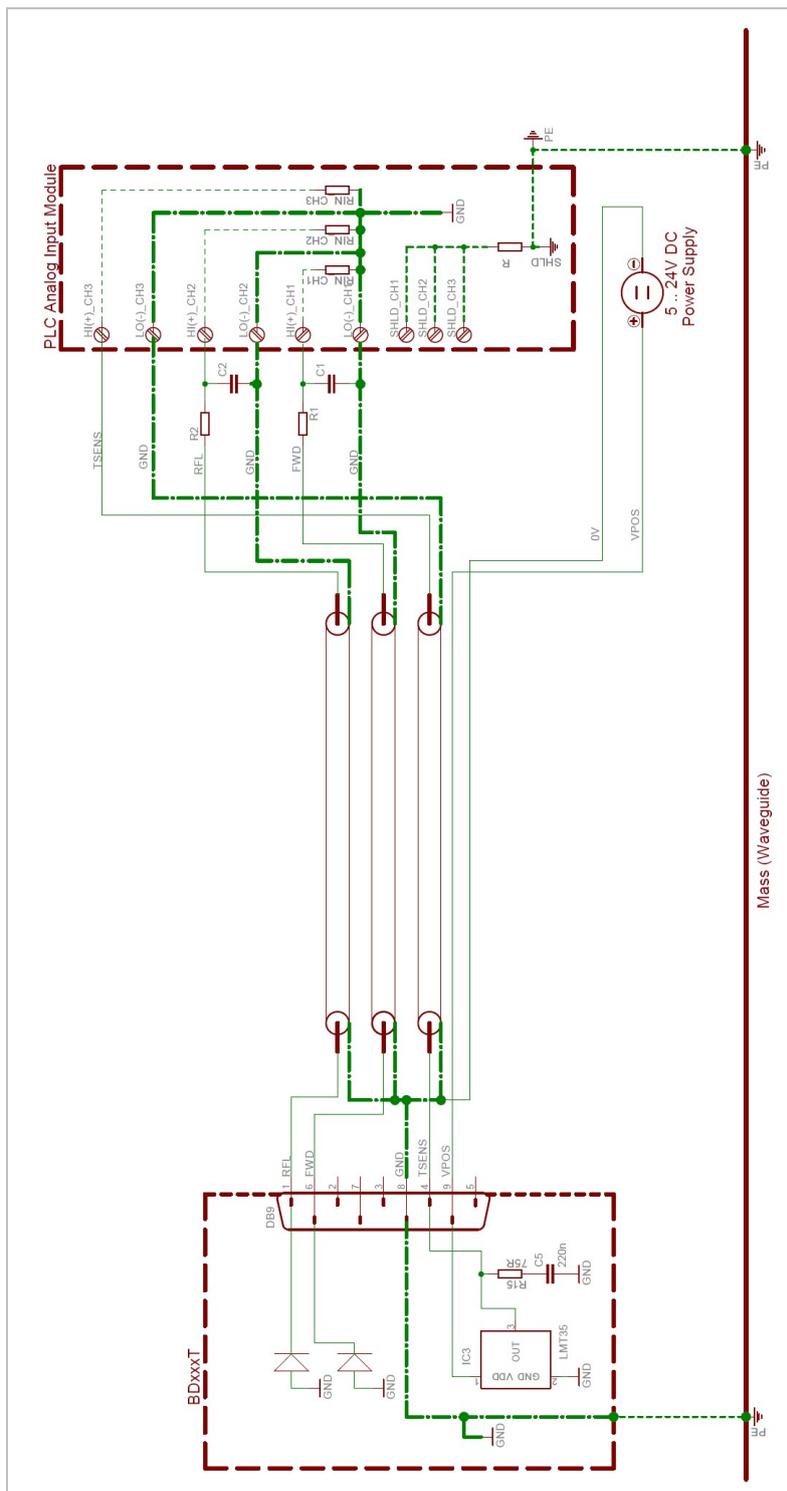


Fig. 9. Example of BD214T – PLC connection.

### Time Constant

The internal output time constant of BD112 is set to approximately 17 μs (3-dB cutoff frequency of about 10 kHz). To improve interference immunity in CW applications, the time constant can be increased by an optional external RC filter as indicated in the wiring diagram (R1, C1 and R2, C2). The filters, if applied, should be placed as close to the PLC inputs as possible.